

Vasca / Bathtub

IN OUT

AVAS1041E_

Vasca Cementoskin®

Bathtub Cementoskin®

MANUTENZIONE

Nota

Per la normale pulizia si consiglia di utilizzare detergenti di uso comune. Si sconsiglia l'utilizzo di detergenti abrasivi, acidi e anticalcare.

La vasca "In Out" deve essere installata su un pavimento perfettamente in piano e non può essere incassata. Predisporre l'impianto di scarico a pavimento con tubo in the floor, ending with a 40 terminale diametro 40 mm con mm diameter pipe with a guarniuzione di tenuta.

Sono a cura dell'installatore la Handling in safety, structural movimentazione in sicurezza, le verifiche strutturali e la portata dei solai.

MAINTENANCE

For normal cleaning use common detergents. Do not use either abrasive detergents or solvents, acids and anti limestone.

Note

The "In Out" bathtub must be positioned on a flat floor surface and cannot be built-in. Prepare the sewage mains sealed gasket.

tests and tests of the load-bearing capacity of the floor are the responsibility of the installer.




Predisporre l'impianto per effetturare il drenaggio dell'acqua per evitare che durante l'inverno possa gelare e causare danni a tubi, raccordi, irrigatori.

Prepare the system to drain the water, to prevent it from freezing during the winter and causing damage to pipes, fittings, sprinklers.

Agape srl via A. Pitentino, 6 46037 Governolo Roncoferraro (MN), Italy T +39 0376 250311 / F +39 0376 250330 e-mail: info@agapedesign.it www.agapedesign.it





AVAS1041E		2/5
COD.	VERS.	2/3
20232	2021-01-12 - T.B	

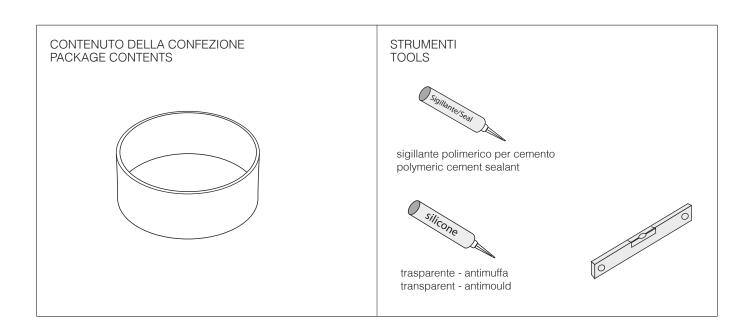

PREDISPOSIZIONE WASHBASIN PREDISPOSITION


VASCA INSTALLATA BATHTUB MOUNTED

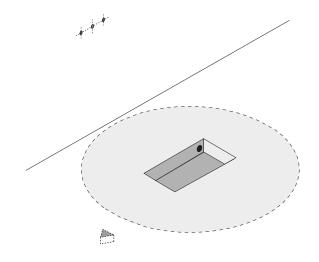


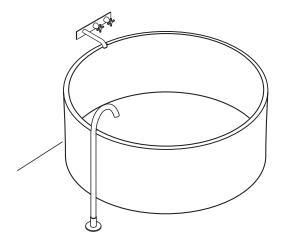




AVAS1041E_ 3/5

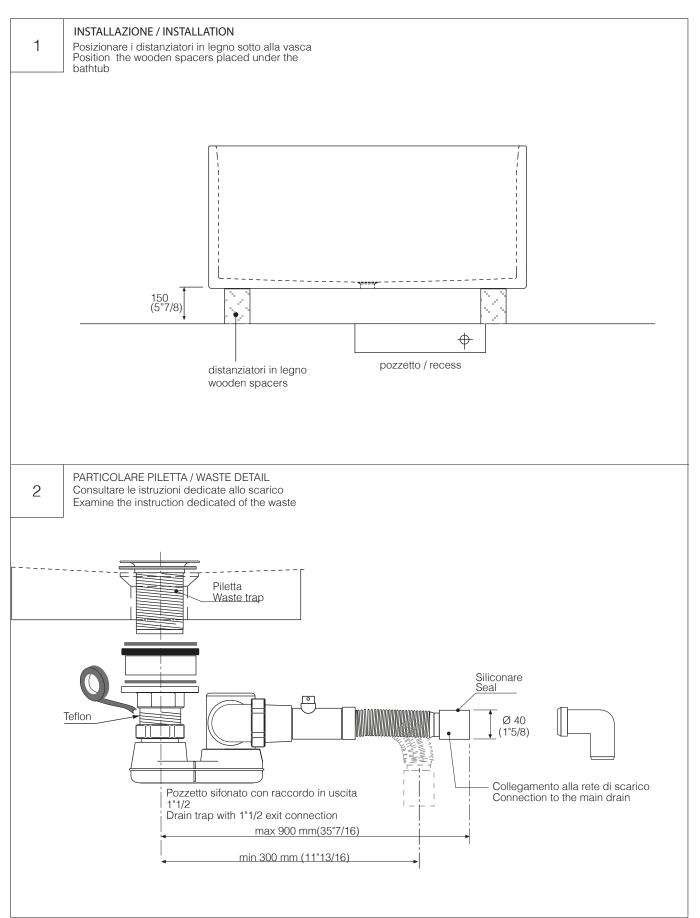



AVAS1041E_ 4/5


Collegare il sifone e la piletta . Connect the drain trap and the waste .

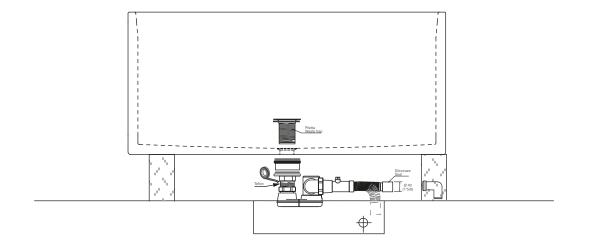

4

 \triangle

Collegare alla rete di scarico Effettuare alcune prove di tenuta dell'impianto realizzato Connection to the main drain Test different times the seal of the realised plant

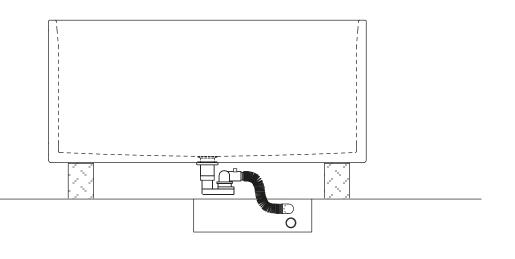




AVAS1041E 5/5

5


Nel caso non si siano verificate perdite togliere i distanziatori in legno avendo cura di non effettuare movimenti bruschi o spostamenti troppo ampi.

If no losses are occurred, remove the wooden spacers without provoking hard movements or wide shifts.

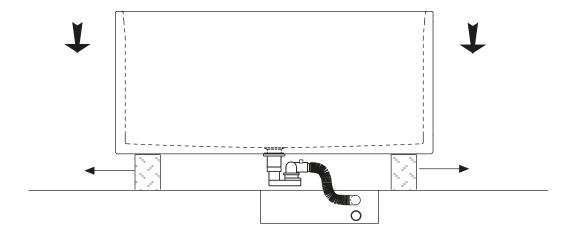

6

Siliconare il perimetro del basamento Apply silicone to the base perimeter

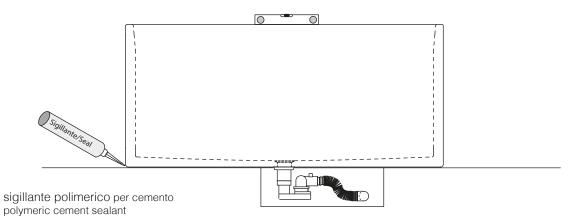

STOP 24 h.

